


Consciot LED LANTERN

Operation Guide

For your safety, read before operating

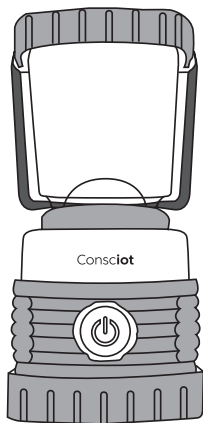

Every purchase comes with an extended one-year return policy and friendly customer service provided by Consciot.

Before you use this device for the first time, please read following notes in this Manual and heed all warnings and cautions, even if you are familiar with handling electronic devices. Keep this manual in a safe place for future reference.

PACKAGE CONTENTS

- A 1 x LED Lantern(Without battery)
- B 1x User Manual
- If 2Pack, the content A will double.

SPECIFICATIONS


Model	ZY-CL503
Material	ABS / PC
Finish	Grass Green
Color Temperature	3000K-6500K
Luminance	1000lm
Water Resistance	IPX4
Power supply	3 * D type battery(exclude)

OPERATION GUIDE

1. Please check the product carefully prior to usage.
2. Unscrew the lamp base from the main body in order to get access to the battery compartment.
3. Put three 1.5V batteries (size D) correctly into the battery compartment and screw the lamp base back tightly.
4. Press the power switch in turn to adjust between five modes: "6500K/3000K/5000K/flash/off", Once select the modes after 30s, press the power switch again to directly turn off. Long press the power switch to enter dimming, and the lantern has no memory function.

Modes	Brightness	Endurance
6500K	750lm	18H
3000K	350lm	25H
5000K	1000lm	12H
Flash	1000lm	//

BATTERY INSTALLATION

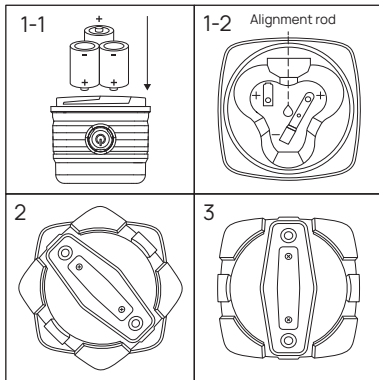

1-1&1-2: Put the lantern upside down on a flat surface, screw off the back cover to get to the battery compartment. Put in 3 D sized batteries, orient the batteries correctly by following "+" and "-" directions.

2: Align the cover, intrude the pole into the hole properly. Slightly rotate the back cover until align properly as shown in image 2).

3: Press down the cover, then twist a quarter-turn until rotate it into place. Recommend check out our installation video on the detail page of the item.

NOTE

1. Remove the batteries before maintenance or in case the lantern will not be used for a long time.
2. To avoid any damage to the lantern, please do not use any chemical solvents during the routine maintenance.
3. To protect the environment, please do not throw away used batteries at will.

GUARANTEE

Consciot LED LANTERN is backed by 24 MONTHS Product warranty. For quasetions, assistance or support, please call the customer service or contact us by E-mail.

CONTACT US

SPRING SUNSHINE TECHNOLOGY CO., LIMITED
Adr.: FLAT/RM 01-04, 24/F, FU FAI COMMERCIAL
CENTRE, 27 HILLIER STREET, SHEUNG WAN, HK
Phone: +1(866)698 6211 (Mon.-Fri. 9 to 5 PST)
Website: www.consciot.com
E-mail: support@consciot.com
Made in China

