

## Remote controller **GENERAL INFORMATION**

### 1. INSTALLING RECEIVER IN CEILING FAN

#### A. Safety precautions


WARNING: HIGH VOLTAGE !

Disconnect power by removing fuse or switching off circuit breaker.

Electrical wire must meet all local and national electrical code requirements

#### B. Electrical rating: 100V-240VAC 50/60Hz

#### C. Wiring diagram:

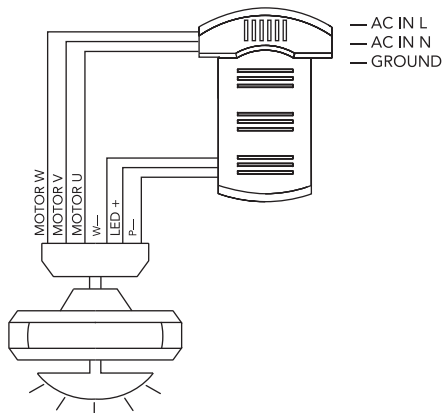


### 2. OPERATING TRANSMITTER:

#### A. Install battery LR03/AAA1.5V\*2(not included).

(To prevent damage to transmitter, remove the battery if not used for a long time).

#### B. Store the transmitter away from excessive heat or humidity.

#### C. Operating the buttons on the panel of the transmitter.

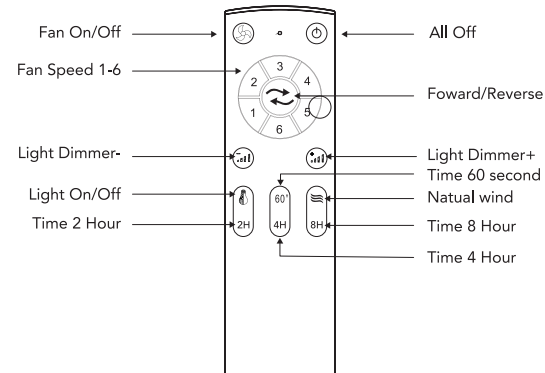

### 3. Setting the codes on the receiver:

Learning code matching mode is used between REMOTE CONTROL and receiver. Turn on the supply power within 5 seconds and press the REMOTE CONTROL "ALL OFF" button for 3 seconds, it can load normally after hearing a long sound "bee", which means learning successfully and it can works normally.

(PS: Learning mode is not accepted after turn "ON" the supply power for 5 seconds)